



SINGLE POINT LESSON

Topic: L316 DEFENDER **TRANSPORTER LOADING Mandatory** Checks

Who To: All Contractors who Handle JLR Product Engaged In Transporter Loading

Summary

VEHICLE MUST BE SET TO **LOW RANGE** Ensure this is ENGAGED PRIOR TO LOADING IN **LOW GEAR** AT CRAWL SPEED ONTO THE TRANSPORTER

***CAUTION** Please ensure Engine has been warmed up **PRIOR to Loading > Minimum 1 Minute Engine Running at Idle**


TO SELECT LOW RANGE

- STEP 1a > FIRST SELECT FIRST GEAR
- STEP 1b > MOVE RANGE SELECTION LEVER FROM HIGH TO NEUTRAL POSITION
- STEP 1c > GENTLY APPLY PRESSURE ON LEVER TOWARDS TO TOWARDS LOW POSITION
- STEP 1d > SLOWLY ENGAGE CLUTCH UNTIL LOW RANGE ENGAGES

LANDROVER DEFENDER (L316)



ENGAGE LOW RANGE USING RANGE SELECTION LEVER

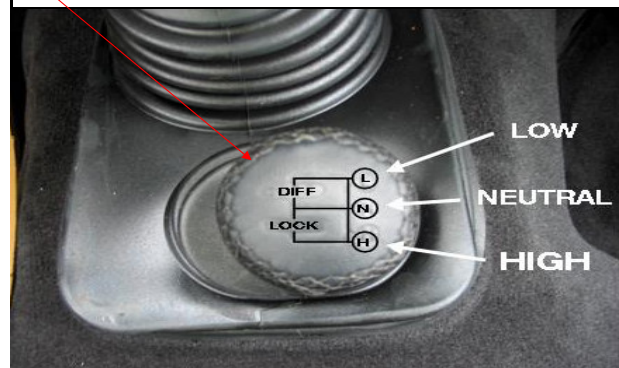

Once **Low Range** Is Engaged .Select **1st Gear** (Manual) and commence Loading at **CRAWL SPEED** to prevent suspension bounce and grounding of under body arrears and components